

Instruction for the operation of Denon DN-HC 4500 with Ultramixer

2.3

Play / Pause, CUE

The Play button starts an MP3, the break button pauses the MP3, the CUE button sets the MP3 back to the beginning.

Pitch und Time

The function Pitching / TimeStretching can be switched over with the Key button, Pitch Bend value.

Display

The display provides the following information. Display of the artist and title as ticker, display of the Pitch or BPM, the changeover happens if the time button is longer holded pressed.

Samples und CUEs

Samples can be started direct over the function keys. With the flip button you can switch from sampler to CUE, to record the CUEs. The loading of the CUE points occurs over the function keys. The CUE points are recorded over the function memo+function/key x press.

Working in the filearchive

To scroll in the filearchive the rotary knobs in the FA-Mode are used. The playlist button has to be pushed as long as the ring below the rotary knob flashes blue. The playlist button has to be pushed additionally and flashes orange. The titles than can be loaded per pushing of the button, from the filearchive into the playlist.

Categories in the Filearchive

To open and close the categories in the filearchive the L-button has to be holded and pressed and per knob a click is done. If the L-button is pressed and the knob is turned you are moving in the sub folders in and out.

Load titles direct into the player

To load an MP3 right away from the filearchives into the player, the knob has to be pressed longer.

Relocate titles in the playlist

If you want to relocate a title in the playlist, the L-button has to be holded and pressed and you scroll over the rotary knob. Therefore the title can be placed on any position.

Framesearch per Joghwheel

Three options can be operated over the Joghwheel. Mode OFF, PITCH, SEARCH. These options have to be selected over the Joghwheel Mode button. Off – no lighting, Pitch – orange lighted, Search – green lighted.

Loop IN/OUT/Loop

A Loop is set over the A2 Loop key, the key Sample Loop is for the Loop Out and Start. The key Exit ReLoop stops the Loop.

Auto DJ / Next.

Over the Key A1 on the left player, the Auto DJ can be switched on and off. The key A1 on the right player is the “Next” key to fade a track manually.

Focusing on the search field.

To get into the rapid search without the mouse, the key F1 on the keyboard has to be pressed. After pressing F1, an entry over the keyboard is possible.

Image is © by Denon

